


# A1312 Pro Clima Roof Warm Roof Detail

## Parapet - Balloon Framing

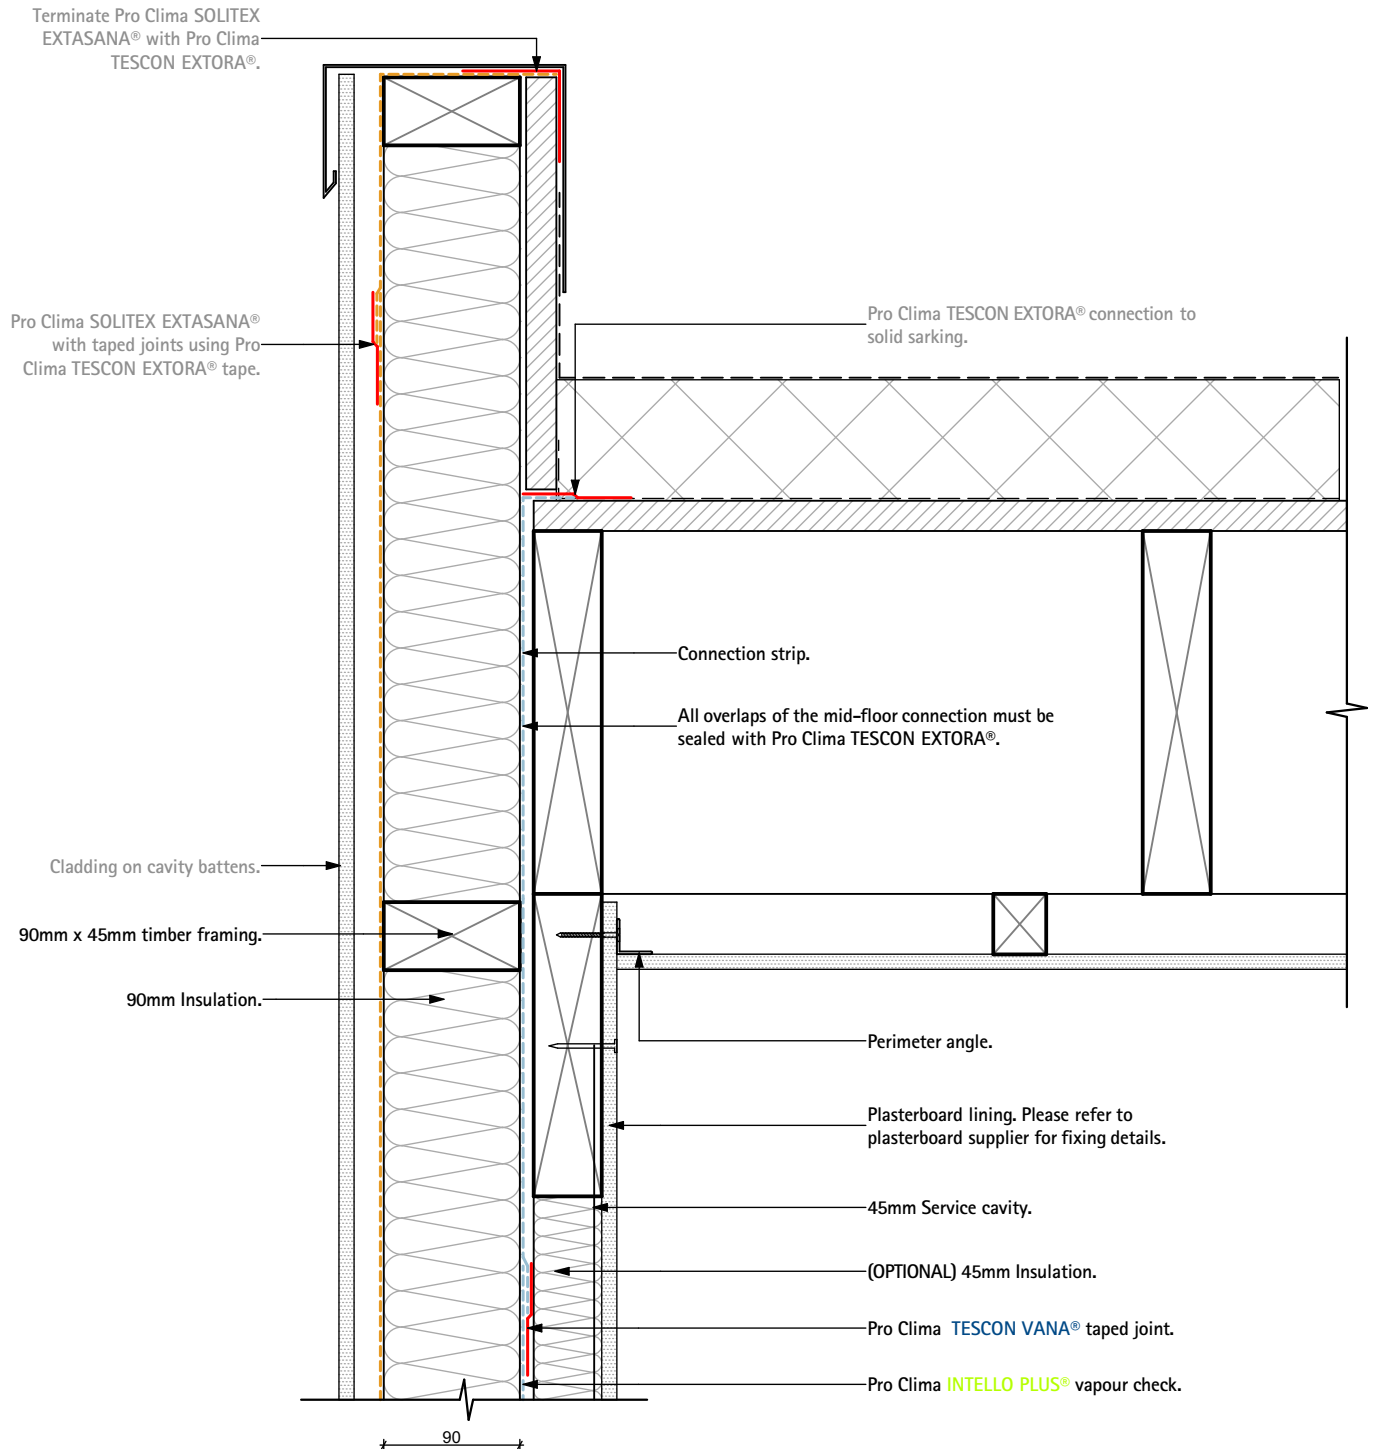

NOTE: Connection Strip must be installed during framing stage.



**Pro Clima NZ Limited**

Freephone: 0800 PRO CLIMA (776 254)  
PO Box 925 CBD

Phone: 04 589 8460  
Fax: 04 589 8461

Wellington 6140

Email: [support@proclima.co.nz](mailto:support@proclima.co.nz)  
Web: [www.proclima.co.nz](http://www.proclima.co.nz)

Title:

**Roof Warm Roof Detail**

Scale: 1:5  
Revision: D  
Issued: 06-03-2019

Detail  
Number:

**A1312**

© This drawing is the property of pro clima and must not be copied without permission. This drawing is a Guideline only. Thermal and hygrothermal performance should match specific design, materials and climate requirements. These can be confirmed by hygrothermal analysis using software eg WUFI.